

Chicago Coin's Band Box®

1950 Deluxe Parts List

[BACK HOME](#)

Item #	Cabinet Parts Descriptions	Price EA	Quantity
1	Top Marquee	\$100.00	_____
2	Back Mural	\$100.00	_____
3	Strike Up The Band screen	\$100.00	_____
4	Hit Tune Of The Week screen	\$100.00	_____
5	Custom made lower screens	CALL	_____
6	Cast CC Stand set of 4	\$225.00	_____
7	Cast CC Stand Each	\$50.00	_____
8	NBC Microphone	\$25.00	_____
9	Cast Horn	\$35.00	_____
10	Cast Sax	\$35.00	_____
11	Cast Violin	\$35.00	_____
12	Trombone	\$50.00	_____
13	Cast Stand Up Base	\$100.00	_____
14	Cast large Drum	\$100.00	_____
15	Large Drum Red Balls	\$20.00	_____
16	Cast Small Drum	\$45.00	_____
17	Cast Drum white cover	\$10.00	_____
18	Cast Piano	\$125.00	_____
19	Cabinet Side Casting set	\$275.00	_____
20	Drapery Arm 3 piece assy.	CALL	_____
21	Motor shaft bracket	\$15.00	_____
22	Motor mounting bracket	\$15.00	_____
23	Motor off set bracket	\$5.00	_____
24	Standard Puppet set with Singer	\$1,300.00	_____
25	Standard Puppet set 7 piece	\$1,200.00	_____
26	Standard Singer puppet	\$200.00	_____
27	Single replacement puppet	\$200.00	_____
28	Cowboy Puppet set with Singer	\$1,300.00	_____
29	Cowboy Puppet set 7 piece	\$1,200.00	_____
30	Cowboy Singer puppet	\$200.00	_____
31	White Cowboy hat	\$5.00	_____
32	Black Cowboy hat	\$5.00	_____
33	CUSTOM PAINTED PUPPETS	CALL	_____
34	Base puppet support bracket	\$2.00	_____
35	Cabinet "Z" support bracket	\$3.00	_____
36	Cabinet top support rod	\$10.00	_____
37	Back door hinge	\$5.00	_____
38	Rear door latch assy.	\$35.00	_____
39	Rear door catch bracket	\$5.00	_____

Continued on next page

Chicago Coin's Band Box®

1950 Deluxe Parts List

[BACK HOME](#)

Item #	Cabinet Parts Descriptions Cont.	Price EA	Quantity
40	Rear door bottom "L" bracket	\$25.00	_____
41	Top back cabinet bracket	\$15.00	_____
42	Top light valance assy.	\$15.00	_____
43	Top light valance plastic	\$5.00	_____
44	Pilaster plastic set	\$25.00	_____
45	Side castings plastic set	\$15.00	_____
46	Stage plastic set	\$50.00	_____
47	CC Casting plastic set	25.00	_____
48	Speaker screen	20.00	_____
49	Cabinet trim strip set	200.00	_____
50	Stage trim set	75.00	_____
51	Wood Back Door	35.00	_____
52	Complete New Cabinet	1000.00	_____
53	Drapery set	\$150.00	_____
54			_____
55			_____
56			_____
57			_____
58			_____
59			_____
60			_____
61			_____
62			_____
63			_____
64			_____
65			_____
66			_____
67			_____
68			_____
69			_____
70			_____
71			_____
72			_____
73			_____
74			_____
75			_____
76			_____
77			_____
78			_____
79			_____
80			_____
81			_____
82			_____
83			_____
84			_____
85			_____

Chicago Coin's Band Box®

1950 Deluxe Parts List

[BACK HOME](#)

Item #	Mech. Parts Descriptions	Price EA	Quantity
200	Complete lower mech. frame assy.	CALL	_____
201	Main mech. drive assy.	CALL	_____
202	3/8" hub coupling	\$20.00	_____
203	5/16" hub coupling	\$20.00	_____
204	Rubber coupling cross	\$15.00	_____
205	Small Gear Shaft Assy.	\$20.00	_____
206	Small gear	\$75.00	_____
207	Worm gear	\$50.00	_____
208	Piano cam lobe	CALL	_____
209	Drummer cam lobe	\$25.00	_____
210	Base cam lobe	\$15.00	_____
211	Base "L" bracket	\$2.00	_____
212	Base rod	\$1.00	_____
213	Base bow cam	\$5.00	_____
214	Violin arm rod	\$5.00	_____
215	Piano sway arm	CALL	_____
216	Piano sway arm bracket	CALL	_____
217	Piano composite wheel	\$20.00	_____
218	Drummer cam to Base head rod	\$5.00	_____
219	Violin arm to Base cam rod	\$5.00	_____
220	Trumpet / Horn player rod	\$5.00	_____
221	Gear pin to Drum. cam rod	\$5.00	_____
222	Gear pin to Cross bar rod	\$5.00	_____
223	Base spring rod assy.	\$15.00	_____
224	Base cam to Rocker arm rod	\$5.00	_____
225	Piano Head cam to Cross bar rod	\$5.00	_____
226	Base Head to Drummer cam rod	\$5.00	_____
227	Cross to Trumpet / Horn rod	\$5.00	_____
228	Base cam to Drum. cam rod	\$5.00	_____
229	Base cam to Violin cam rod	\$5.00	_____
230	Singer to Piano cam rod	\$5.00	_____
231	Violin Bow	\$5.00	_____
232	Base Bow	\$5.00	_____
233	Drummer Rod Assy.	\$5.00	_____
234	Drummer "U" Bracket	\$3.00	_____
235	Drummer composite wheel	\$20.00	_____
236	Drummer wheel flat bracket	\$1.00	_____
237	Drummer wheel spring	\$5.00	_____
238	Sax & Trumpet 1/4" spec. Bolts	\$0.50	_____
239	Sax & Trumpet flat bar 2 req.	\$3.00	_____
240	Sax & Trumpet rocker bar	\$10.00	_____
241	Base rocker wheel bracket	\$10.00	_____

Continued on next page

Chicago Coin's Band Box®

1950 Deluxe Parts List

[BACK HOME](#)

Item #	Mech. Parts Descriptions Cont.	Price EA	Quantity
242	Cross bar mounting bolt	\$3.00	_____
243	Cross bar	\$5.00	_____
244	Base player head cam	\$5.00	_____
245	Violin arm cam	\$5.00	_____
246	Drummer rod cam	\$5.00	_____
247	Singer cam	\$3.00	_____
248	Trombone seat swivel bracket assy.	\$50.00	_____
249	Drummer support bracket assy.	\$10.00	_____
250	Motor grommets & inserts	\$10.00	_____
251	1/8" collar	\$2.00	_____
252	5/16" collar	\$3.00	_____
253	Base cam swivel rod assy.	\$25.00	_____
254	Base main shaft cam	CALL	_____
255			_____
256			_____
257			_____
258	Other Mech parts	CALL	_____
259			_____
260			_____
261			_____
262			_____
263			_____
264			_____
265			_____
266			_____
267			_____
268			_____
269			_____
270			_____
271			_____
272			_____
273			_____
274			_____
275			_____
276			_____
277			_____
278			_____
279			_____
280			_____
281			_____
282			_____
283			_____
284			_____
285			_____

Chicago Coin's Band Box®

1950 Deluxe Parts List

[BACK HOME](#)

Item #	Electrical Parts Descriptions	Price EA	Quantity
300	Drapery motor	\$100.00	_____
301	Mech. motor	\$100.00	_____
302	60 W lamp socket W/bracket	\$6.00	_____
303	Florescent lamp conversion kit each	\$50.00	_____
304	Florescent ballast	\$10.00	_____
305	Florescent starter	\$3.00	_____
306	Florescent starter socket	\$10.00	_____
307	Florescent lamp tombstone	\$3.00	_____
308	Florescent lamp amber sleeve	\$10.00	_____
309	Florescent lamp red sleeve	\$10.00	_____
310	Original 30 Volt transformer	CALL	_____
311	Original 30 Volt relay	CALL	_____
312	24 Volt transformer	\$20.00	_____
313	24 Volt relay	\$20.00	_____
314	24 Volt relay base	\$10.00	_____
315	1/4" fuse holder	\$3.00	_____
316	In line drapery switch	\$4.00	_____
317	Original 5 pin socket	CALL	_____
318	Original 5 pin plug	CALL	_____
319	8 pin socket	\$5.00	_____
320	8 pin plug	\$5.00	_____
321	Wurlitzer 24 play switch assy.	\$75.00	_____
322	10" speaker 35 Watt	\$50.00	_____
323	Luma lamp 60 Watt	\$50.00	_____
324	Luma lamp end cap	\$10.00	_____
325	Luma lamp socket	\$10.00	_____
326	DPDT drapery switch	\$35.00	_____
327	SPDT drapery switch	\$20.00	_____
328	Original drapery switches	CALL	_____
329			_____
330			_____
331			_____
332			_____
333			_____
334			_____
335			_____
336			_____
337			_____
338			_____
339			_____
331			_____
332			_____
333			_____